




Strong As An Ox™

## BX88186 Movable SportLift Kit Winch Style Instructions

1. Pin Item 1 (pinned assembly) into the deck of SportLift.
2. Slide both of Item 2 (slide-in assemblies) into the deck, making sure to go through the tie down rods as shown in the diagram below. Loosen up the flat enough to go over the tie down rod. Then tighten the flats down to clamp over the tie down rods.
3. Pin the slider support tubes on the bottom side of the 5 x 7 tube of the Sportlift in the extended position shown below.
4. Put the Item 3 (support assemblies) into the angles on the front side of the deck, then adjust the height of these assemblies by tightening the 1/2-13 hex bolt. Stick the 5/8" pin through the top of the slider tube, then stick the flat through the u-channel as shown below.
5. Tighten the 1/2-13 hex bolt on the top enough so the pressure is off of the receivers.
6. Take the pins out of the three receivers, then loosen the stinger brackets to make it easier for the Sportlift to come out of the receivers.
7. The SportLift should slide out, this may take two people.

Ref. No.	Qty.	Part No.	Description
1	1	62-3510	Assy, Pinned
2	2	62-3509	Assy, Slide In
3	2	61-5928	Wdm't, Receiver, BX88186
4	2	104-0639	Rod, Extension, BX88186
5	2	102-6431	Flat, Clamp
6	1	200-1483	Pin, 5/8 x 3 w/#9 clip
7	2	201-0377	1/2-13 X 5 1/2 HH bolt, Grd.5, ZP
8	2	201-0443	3/8-16 x 1 Hex Bolt, Grd.5, ZP

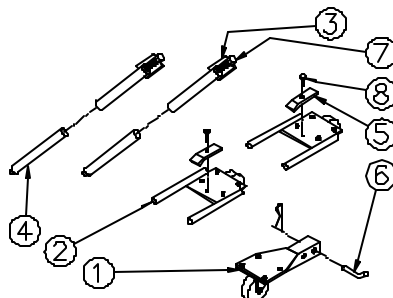

### KIT IN USE

