




Strong As An Ox™

SC9005

Kit, Lights, Bolt On - Used on SC2000, SC2001, SC2100, & SC2101

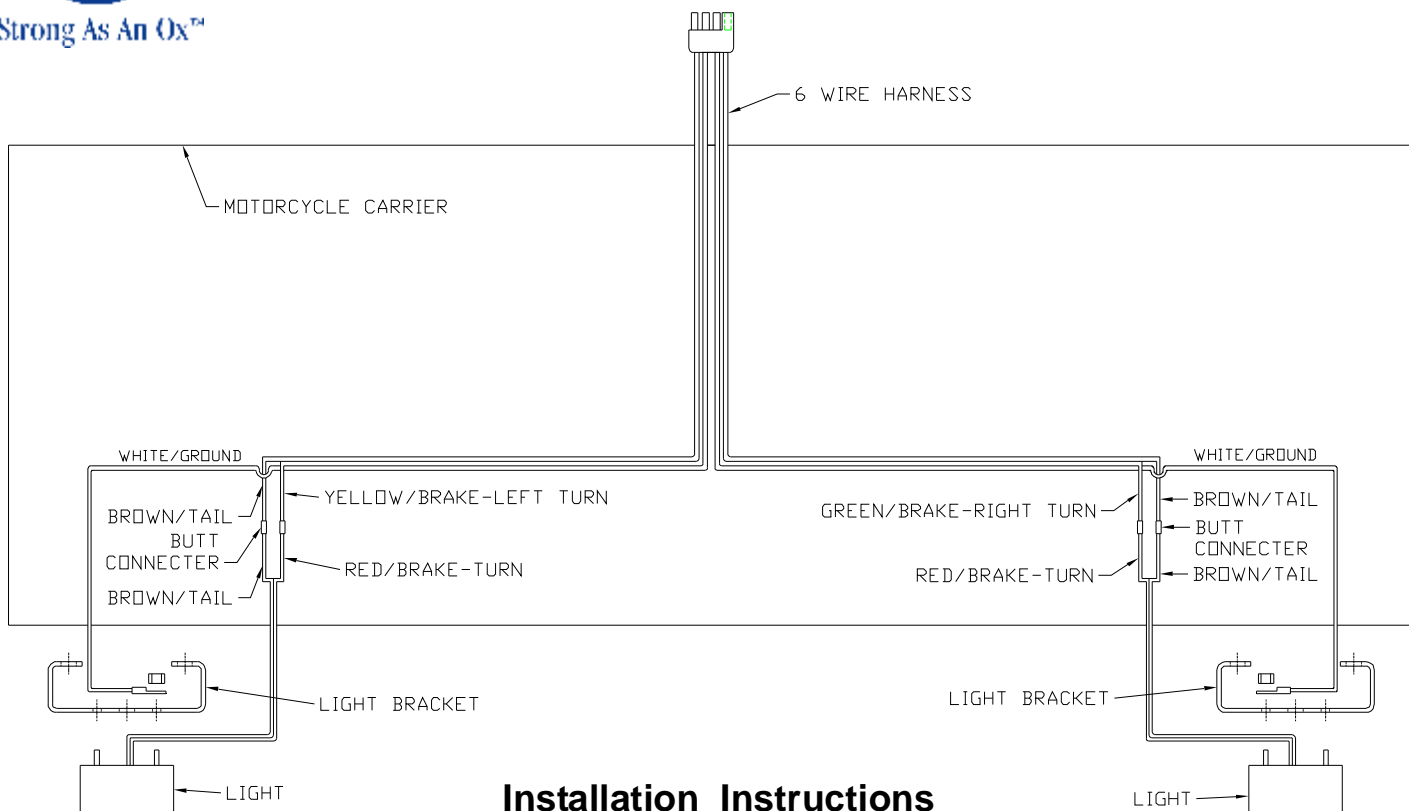

Installation Instructions

1. Mount the two lights to the light brackets supplied as shown above. Using a ring connector for each light, be sure to ground each of the white wires of the 6 wire harness as shown above.
2. Then bolt the light brackets to the deck of the carrier with 1/4-20 x 3/4" or 1/4-20 x 2 1/2" carriage bolts, 1/4" flat washers and 1/4-20 hex nylock nuts depending on what carrier you have.
3. Continue wiring the lights with the supplied butt connectors and 3/8" shrink tube. Note: Be sure to slide shrink tube on wire before butt connecting wires together. The green wire connects to the red wire of the light on the passenger's side. The yellow wire connects to the red wire of the light on the driver's side. The brown wire of each light connects to the brown wire of the 6 wire harness as shown above. After butt connecting all the wires, use a heat shrink gun on all shrink tube.
4. Connect the 4 wire flat connector to the connection on the coach and test the wiring to make sure everything is operating correctly. If it is, use the loom and wire ties to secure wires in place.


If you should have any questions, please contact Blue Ox's Sales/Service Department.



Strong As An Ox™

SC9005

Kit, Lights, Bolt On - Used on SC2000, SC2001, SC2100, & SC2101

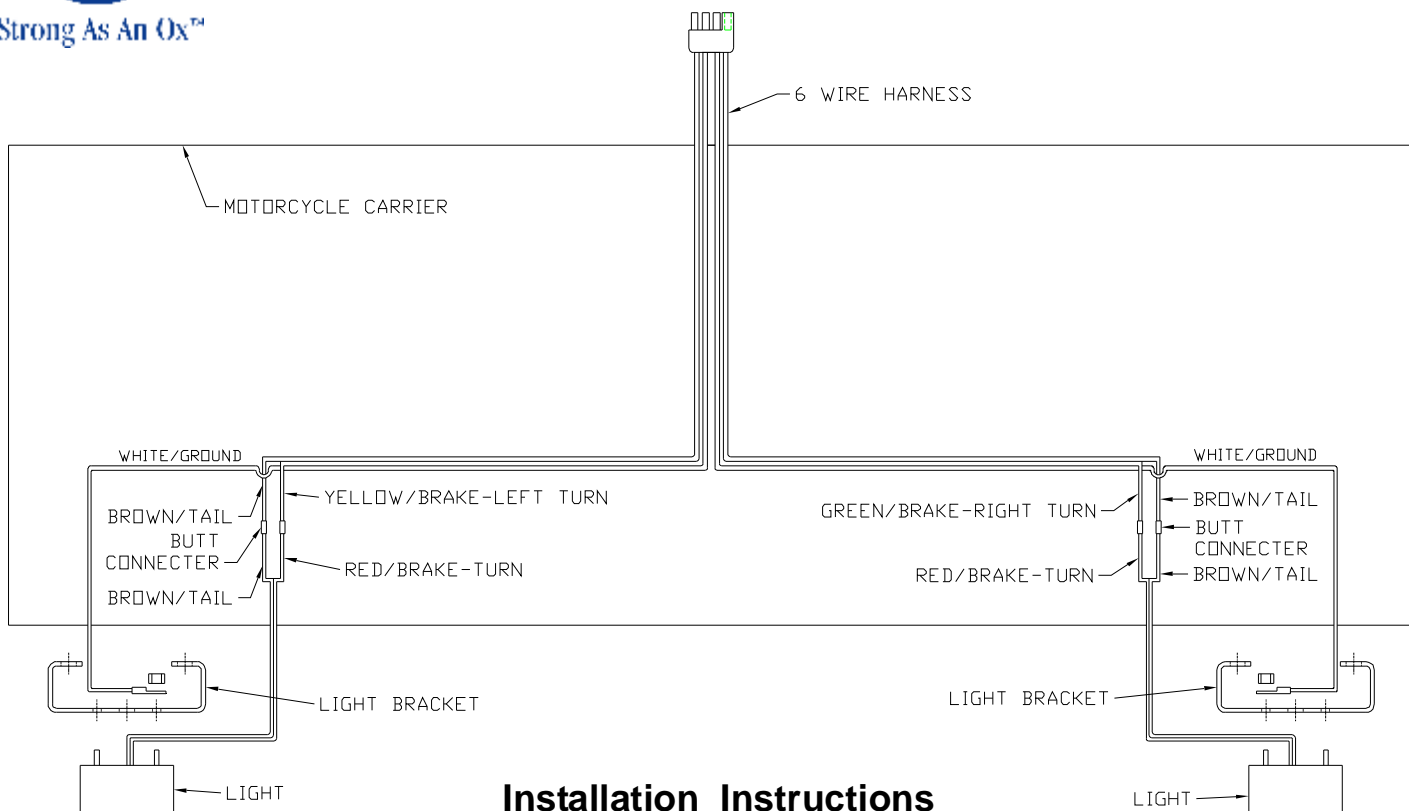

Installation Instructions

1. Mount the two lights to the light brackets supplied as shown above. Using a ring connector for each light, be sure to ground each of the white wires of the 6 wire harness as shown above.
2. Then bolt the light brackets to the deck of the carrier with 1/4-20 x 3/4" or 1/4-20 x 2 1/2" carriage bolts, 1/4" flat washers and 1/4-20 hex nylock nuts depending on what carrier you have.
3. Continue wiring the lights with the supplied butt connectors and 3/8" shrink tube. Note: Be sure to slide shrink tube on wire before butt connecting wires together. The green wire connects to the red wire of the light on the passenger's side. The yellow wire connects to the red wire of the light on the driver's side. The brown wire of each light connects to the brown wire of the 6 wire harness as shown above. After butt connecting all the wires, use a heat shrink gun on all shrink tube.
4. Connect the 4 wire flat connector to the connection on the coach and test the wiring to make sure everything is operating correctly. If it is, use the loom and wire ties to secure wires in place.

If you should have any questions, please contact Blue Ox's Sales/Service Department.