




BX8812 Installation Instructions Safety Cable Holder

1. Remove your existing ball from the hitch. Inspect the lock washer and nut for reuse. Replace either or both if their condition is suspect.
2. Slide the safety cable holder onto the ball as shown, with the coils forward and down.
3. Reinstall the ball to the hitch using the lock washer and nut previously removed, or new ones.
4. Torque the nut to ball manufacturers specifications.
5. Be sure that the ball shank protrudes through the nut enough to use all the threads on the nut. If it does not, acquire a ball with a longer shank that will protrude through.
6. You may now run your safety cables and/or electrical wiring through the coils.

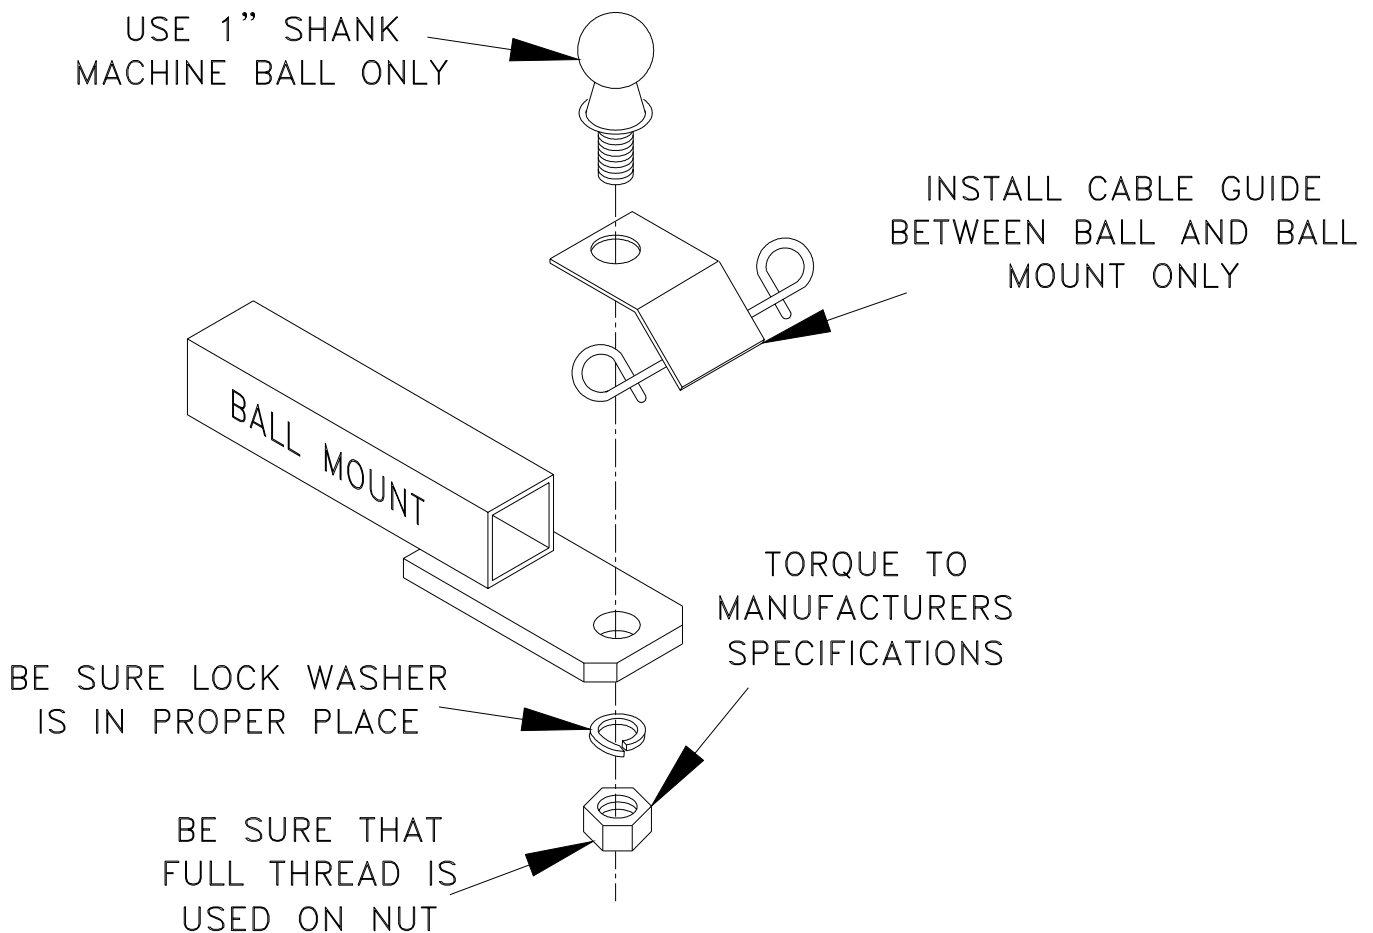

Automatic